

---

## **RECORDING FAILURE**

Remove and re-insert the SD card.

Remove any dirt from the SD card terminals.

Insert the SD card before turning on the power.

Do not subject this unit to strong impact/vibrations.

Turn off this unit, and turn it on again.