

INSERT DISC/CHANGE DISC

Open the tray of the BD/DVD writer, check and reset the BD/DVD, then close the tray.

Replace the disc in the BD/DVD writer.