Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.

1 Touch em to display the menu.



2 Select "MANUAL SETTING" and touch @.



3 Select "SCENE SELECT" and touch @.



4 Select the scene and touch .



Setting	Effect
⊠ NIGHT EYE	Increases gain and brightens the scene automatically when the surrounding is dark. To prevent camera shake, use a tripod. OFF ON
☑NIGHT (GZ-HM330)	Captures night scenes naturally. OFF ON
©PORTRAIT (GZ-HM330)	Blurs the background to bring out the people in the picture. OFF ON
SPORTS (GZ-HM330)	Captures fast-moving subjects clearly in every single frame. OFF ON
ASNOW (GZ-HM330)	Prevents the subject from appearing too dark when recording snow scenes on a sunny day. OFF ON
■ SPOTLIGHT	Prevents the human subject from appearing too bright under light. OFF ON

^{*}The image is only an impression.