



Protecting the Currently Displayed File

Protects or releases protection of the currently displayed file.

1 Select the playback mode.

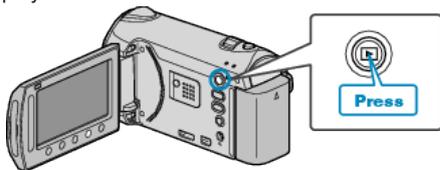

2 Select video or still image mode.

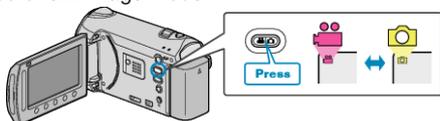

3 Touch **MENU** to display the menu.



4 Select "EDIT" and touch **OK**.



5 Select "PROTECT/CANCEL" and touch **OK**.



6 Select "CURRENT" and touch **OK**.



7 Check that it is the file to protect or release protection of, select "YES" and touch **OK**.



- The file to protect or release protection of appears on this screen.
- Touch the operation buttons "←" / "→" to select the previous or next file.
- After setting, touch **OK**.
- To exit the screen, touch **MENU**.