
CREATE DVD menu does not disappear.

While the USB cable is connected, the "CREATE DVD" menu is displayed.