

Optional Accessories

Product Name	Description				
Battery Pack <ul style="list-style-type: none"> • BN-VG114E • BN-VG121E 	<ul style="list-style-type: none"> • Provides a longer recording time than the battery pack that comes with this unit. It can also be used as a spare battery pack. 				
Battery Charger <ul style="list-style-type: none"> • AA-VG1 	<ul style="list-style-type: none"> • Enables the battery pack to be charged without using this unit. 				
DVD Writer <ul style="list-style-type: none"> • CU-VD3 (GZ-HM330) 	<ul style="list-style-type: none"> • Enables the images recorded on this unit to be copied to a DVD without using a PC. 				
DVD Writer <ul style="list-style-type: none"> • CU-VD50 (GZ-HM330) 	<ul style="list-style-type: none"> • Creates DVDs and functions as an external DVD drive when connected to a PC. In addition, created DVDs can be played back by connecting the CU-VD50 to a TV. 				
Component Cable <ul style="list-style-type: none"> • QAM1266-001 	<ul style="list-style-type: none"> • For viewing in high picture quality. 				
USB Cable <ul style="list-style-type: none"> • QAM0852-001 (GZ-HM330) 	<ul style="list-style-type: none"> • Connects this unit to a BD writer or a recommended USB external hard disk drive (see table below). <table border="1" data-bbox="300 835 703 920"> <tbody> <tr> <td>Seagate</td> <td>FreeAgent™ Desk series</td> </tr> <tr> <td>LaCie</td> <td>Design by Neil Poulton series</td> </tr> </tbody> </table>	Seagate	FreeAgent™ Desk series	LaCie	Design by Neil Poulton series
Seagate	FreeAgent™ Desk series				
LaCie	Design by Neil Poulton series				

Memo:

- For more information, refer to the catalog.
- BN-VG114E is the same battery pack that comes with this unit.

Approximate Recording Time (Using Battery)

Battery Pack	Actual Recording Time (GZ-HM330)	Actual Recording Time (GZ-HM310/GZ-HM300)	Continuous Recording Time (GZ-HM330)	Continuous Recording Time (GZ-HM310/GZ-HM300)
BN-VG114E (Supplied)	55 m	1 h	1 h 40 m	1 h 45 m
BN-VG121E	1 h 25 m	1 h 30 m	2 h 30 m	2 h 40 m

- The above are values when "LIGHT" is set to "OFF" and "LCD BACKLIGHT" is set to "STANDARD".
- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly.
(It is recommended to prepare battery packs ready for three times the expected recording time.)
- When the battery life is reached, the recording time becomes shorter even if the battery pack is fully charged.
(Replace the battery pack with a new one.)