


Deleting Folders in the USB External Hard Disk Drive

1 Select video or still image mode.

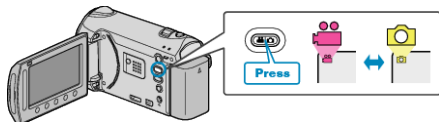

2 Select "DELETE" and touch **OK**.



3 Select the desired folder and touch **OK**.



4 Select "DELETE" and touch **OK**.

- After deleting, touch **OK**.