 
Backing Up Files

1 Select video or still image mode.



2 Select "BACK UP" and touch .



- 3 Select the media to back up and touch .
- 4 Select the desired menu and touch os.



Setting	Details
## "ALL SCENES" ☐ "ALL IMAGES"	All files in the recording medium are copied.
"UNSAVED SCENES" "UNSAVED IMAGES"	Files that have never been copied are automatically selected and copied.

5 Select "OK" and touch ®.



- After copying, touch ®.
- To cancel copying, select "STOP".