

RECORDING FAILURE

Remove and re-insert the SD card.
 Remove any dirt from the SD card terminals.
 Insert the SD card before turning on the power.
 Do not subject this unit to strong impact/vibrations.
 Turn off this unit, and turn it on again.