

**The motion is choppy.**

Replace the SD card. (When the SD card is damaged, difficulty in reading the data occurs. This unit will try to play back as much as possible, but it will stop eventually if the condition persists.)

[Execute](#)

[Verify the system requirements of your PC when using Everio Media-Browser to play back.](#)