REMOTE

Setting	Details
OFF	Does not receive operation signals from the re- mote control.
ON	Receives operation signals from the remote con- trol.

Displaying the Item

1 Touch imenu.



2 Select "BASIC SETTINGS" and touch .



3 Select "REMOTE" and touch .

