The focus is not adjusted automatically.

If you are recording in a dark place or a subject that has no contrast between dark and light, adjust the focus manually. Wipe the lens with a lens cleaning cloth. Cancel manual focus on the manual recording menu.