
The remote control does not work.

[Replace the battery.](#)

[Set](#)

The remote control may not operate outdoors or in places exposed to strong light.