 



Playback with Special Effects

You can add effects to the beginning and end of recorded videos.


1 Select the playback mode.

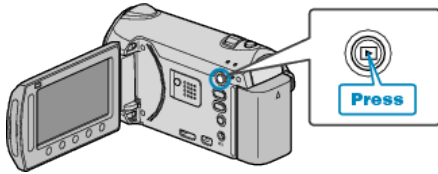

 
2 Select video mode.

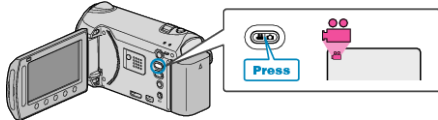

3 Touch \odot to display the menu.

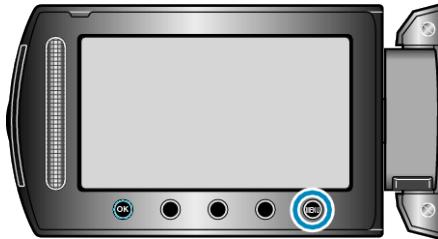 

4 Select "WIPE/FADER" and touch \odot .

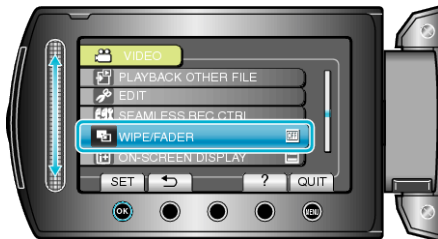 

5 Select a desired effect and touch \odot .



6 Select the desired video and touch \odot .



Setting	Details
OFF	Turns off the effect.
FADER-WHITE	Fades in or out with a white screen.
FADER-BLACK	Fades in or out with a black screen.
WIPE-SLIDE	Wipes in from right to left, or wipes out in the opposite way.
WIPE-DOOR	Wipes in as the two halves of a black screen which open to the left and right revealing the scene, or wipes out in the opposite way.
WIPE-SCROLL	Wipes in from the bottom to the top of a black screen, or wipes out in the opposite way.
WIPE-SHUTTER	Wipes in from the center of a black screen toward the top and bottom, or wipes out in the opposite way.

Memo:

- The effect will not be applied to a recorded video less than 7 seconds.
- The wipe/fader effects are temporary. They do not affect the images directly, and can be disabled when the function is set to "OFF".
- These effects will not be reflected when you create a disc using a DVD writer or external Blu-ray drive.