
BACK-UP menu does not disappear.

While the USB cable is connected, the BACK-UP menu is displayed.