

---

### **The remote control does not work.**

Replace the battery.

Set "REMOTE" in the basic settings menu to "ON".

The remote control may not operate outdoors or in places exposed to strong light.