 
Bottom



- 1 Tripod Mounting Hole
- 2 SD Card Slot
- Insert an optional SD card.
- 3 Battery Release Lever
- 4 Battery Mount