


Front

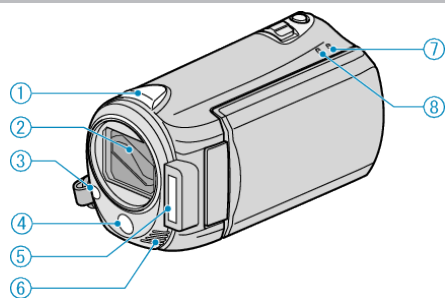

1 Bluetooth Antenna (GZ-HM550 only)

2 Lens/Lens Cover

- Do not touch the lens and lens cover.
- Do not cover the lens with your fingers during video recording.

3 Light

- Turn on the light when shooting in dark places.

4 Remote Sensor

- Do not cover the sensor with your fingers when using the remote control.

5 Flash

6 Stereo Microphone

- Do not cover the microphone with your fingers during video recording.

7 POWER/CHARGE Lamp

- Lights up: Power "ON"
- Blinks: Charging in progress
- Goes out: Charging finished

8 ACCESS Lamp

- Recording or playback is in progress when the lamp lights up or blinks.
Do not remove the battery pack, AC adapter, or SD card.