 



Playing Back Videos


You can select and play back the recorded videos from an index screen (thumbnail display). The contents of the saving destination selected in “REC MEDIA FOR VIDEO” are displayed on the index screen.

1 Select the playback mode.

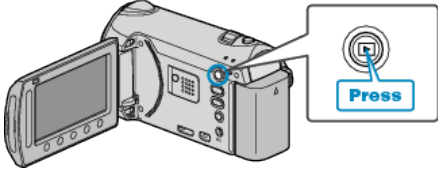

 
2 Select video mode.



3 Select the desired video and touch .







- When faces are detected in a recorded video, the faces are zoomed in and displayed in the thumbnail.
- Touch  to stop playback.

Operation Buttons for Video Playback









During Index Screen Display



Display	Description
	Starts playback of the selected file.
DIGEST	You can play back a digest of the recorded videos.
	You can search for a specific file by the recording date or registered category (event).
	Deletes the selected file.
	Press and hold to move the pages of the index screen.

During Video Playback




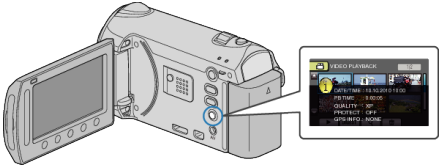 
Display	Description
	Playback/pause
	Stop (returns to thumbnail display)
	Advances to the next video
	Returns to the beginning of the scene
	Forward search
	Reverse search
	Forward slow-motion
	Reverse slow-motion

- Memo:**
- Touch the slider and buttons around the screen with your fingers.
 - The slider and buttons do not function if you touch them with your fingernails or with gloves on.
 - The displays on the screen do not work even if you touch them.
 - You can search for a specific file by the recording date or registered category (event). This is useful when searching from a large number of files.

- CAUTION:**
- Make a backup of important recorded data
It is recommended to copy your important recorded data to a DVD or other recording media for storage. JVC will not be responsible for any lost data.

Checking the Recording Date and Other Information

Press .
You can display the recording date and duration of the selected file.



Increasing/Decreasing the Number to Display on the Index Screen.

Operate the zoom lever when the index screen is displayed (thumbnail display) to change the number of files on the screen in the following order: 6 files → 12 files → 3 files.

- Information of the files also appear when 3 files are displayed.