REC MEDIA FOR VIDEO

Sets the recording/playback media of videos.

Setting	Details
BUILT-IN MEMO- RY	Records videos to the camcorder's built-in memory.
SD CARD	Records videos to the SD card.

Displaying the Item

1 Touch (em) to display the menu.



2 Select "MEDIA SETTINGS" and touch ⊚.



3 Select "REC MEDIA FOR VIDEO", and touch @.

