REC MEDIA FOR IMAGE

Sets the recording/playback media of still images.

Setting	Details
BUILT-IN MEMO- RY	Records still images to the camcorder's built-in memory.
SD CARD	Records still images to the SD card.

Displaying the Item

1 Touch (em) to display the menu.



2 Select "MEDIA SETTINGS" and touch @.



3 Select "REC MEDIA FOR IMAGE" and touch @s.

