• After deleting, touch .

Deleting Playlists

Delete the playlists that you have created.

1 Select the playback mode.



2 Select video mode.



3 Touch (em) to display the menu.



4 Select "EDIT PLAYLIST" and touch @.



5 Select "DELETE" and touch @



6 Select the playlist you want to delete and touch 68.



- All created playlists will be deleted when "DELETE ALL" is selected.
- 7 Select "YES" and touch .



 After deleting is complete, the screen returns to the delete playlist selection screen.