

## POWER IS OFF, OR USB DEVICE IS UNSUPPORTED

Turn on the power of the connected USB device.  
Connect the AC adapter to the DVD writer.