### **VIDEO QUALITY**

Sets the video quality.

# GZ-HM30/GZ-HM50

Setting	Details	
LS	1280 x 720 pixels 60p	Records in high definition with high quality (16:9).
LE	1280 x 720 pixels 60p	For long recordings in high definition with high quality (16:9).
SSW	720 x 480 pixels 60i	Records in standard definition (16:9).
SEW	720 x 480 pixels 60i	For long recordings in standard definition (16:9).
SS	720 x 480 pixels 60i	Records in standard quality (4:3).
SE	720 x 480 pixels 60i	For long recordings in standard quality (4:3).

# GZ-HM430

Setting	Details	
UXP	1920 x 1080 pixels 50p	Enables recording in the best picture quality (16:9).  • Applies to BDs only. To save to DVDs, it is necessary to re-encode the videos to XP mode using the provided software (16:9).
XP	1920 x 1080 pixels 50p	Enables recording in high picture quality (16:9).
SP	1920 x 1080 pixels 50p	Enables recording in standard quality (16:9).
EP	1920 x 1080 pixels 50p	Enables long recording (16:9).
ssw	720 x 576 pixels 50i	Records in standard definition with high quality (16:9).
SEW	720 x 576 pixels 50i	For long recordings in standard definition with high quality (16:9).


### Memo:-

- Set to "LS" mode when recording fast-moving scenes or scenes with extreme changes of brightness to avoid noise. (GZ-HM30/GZ-HM50)
- Set to "UXP" or "XP" mode when recording fast-moving scenes or scenes with extreme change of brightness to avoid noise. (GZ-HM430)
- You can change the video quality from the remaining recording time display.

Select the video quality with the UP/< and DOWN/> buttons and press OK.

# **Displaying the Item**

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

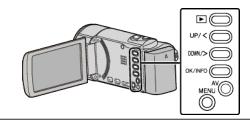

Press MENU.



2 Select "VIDEO QUALITY" and press OK.

