
BACK-UP menu does not disappear.

While the USB cable is connected, the "BACK-UP" menu is displayed.