 


## Protecting the Currently Displayed File

 
Protects or releases protection of the currently displayed file.

### Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

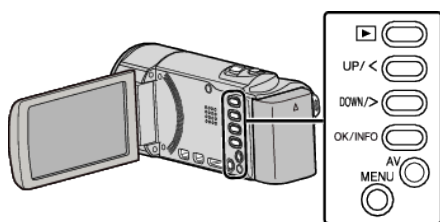


- 1 Select the playback mode.

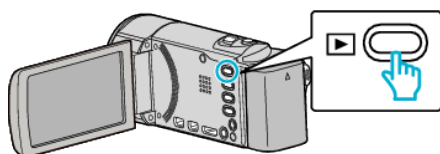


- 2 Press MENU.

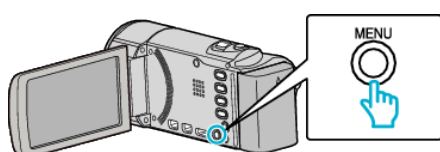 

 - 3 Select "PROTECT/CANCEL" and press OK.

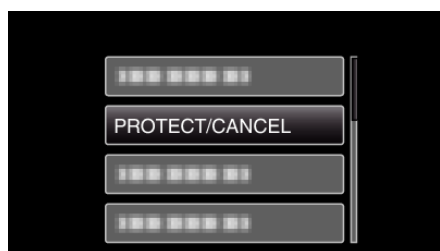

- 4 Select "CURRENT" and press OK.

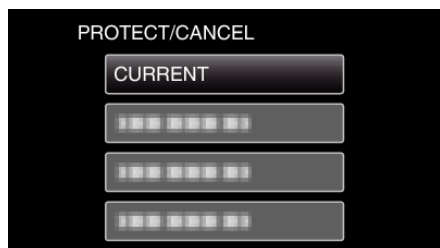 

- 5 Check that it is the file to protect, select "YES" and press OK.



- The file to protect appears on this screen.
- To cancel the protection, select "NO" and press OK.
- Press the zoom lever to select the previous or next file.
- After setting, press OK.
- To exit the screen, press MENU.