 



ERASE ALL DATA (GZ-HM50)

Execute this process when disposing of this unit or passing it to another person.


Memo : _____
To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

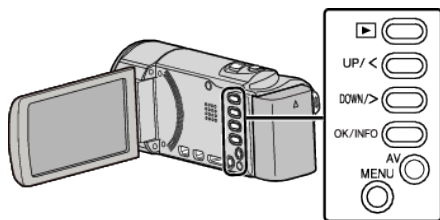

 1 Press MENU.

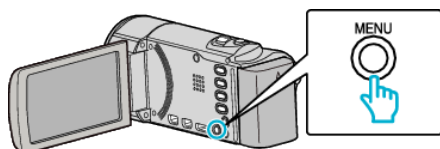

2 Select "MEDIA SETTINGS" and press OK.

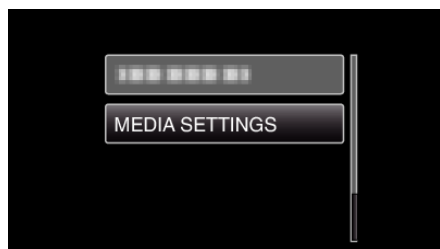 

3 Select "ERASE ALL DATA" and press OK.



4 Select "YES" and press OK.



Caution : _____

- Connect the AC adapter as it may take some time to delete data.

Memo : _____

- Repeat the process to make data restoration even more difficult.