



Interior

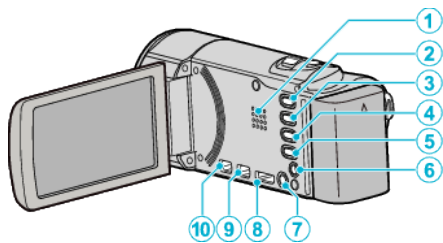

- 1** Speaker
 - Outputs audio sound during video playback.
- 2**  (Play/Record) Button
 - Switches between recording and playback modes.
- 3** UP/< Button
 - UP: Scrolls/moves cursor on the icons upward
 - <: Reverse search
- 4** DOWN/> Button
 - DOWN: Scrolls/moves cursor on the icons downward
 - >: Forward search
- 5** OK/INFO Button
 - Confirms the selection. / Displays information as follows.
 - Recording: Displays the remaining time and battery power.
 - Playback: Displays file information such as recording date.
- 6** AV Connector
 - Connects to a TV, etc.
- 7** MENU (Menu) Button
- 8** HDMI Mini Connector
 - Connects to an HDMI TV.
- 9** USB Connector
 - Connects to computer using a USB cable.
- 10** COMPONENT (Component) Connector (GZ-HM30/GZ-HM50)
 - Connects to a TV, etc.