

شحن وحدة البطارية في الخارج

يختلف شكل مخرج الطاقة باختلاف الدول والمناطق.
لشحن وحدة البطارية، أنت بحاجة إلى قابس تحويل يتفق مع شكل المخرج.

A	B	BF	C	O
				
North America	Europe	Oceania	Middle East	
United States A	Iceland C	Australia O	Israel C	
Canada A	Ireland C	Guam A	Iran C	
Mexico A	United Kingdom B BF	Tahiti C	Kuwait B C	
	Italy C	Tonga O	Jordan B BF	
Asia	Austria C	New Zealand O		
India B C BF	Netherlands C	Fiji O	Africa	
Indonesia C	Canary Islands C		Algeria A B BF C	
Singapore B BF	Greece C	Latin	Egypt B BF C	
Sri Lanka B C BF	Switzerland C	Argentina O	Guinea C	
Thailand A BF C	Sweden C	Colombia A	Kenya B C	
South Korea A C	Spain A C	Jamaica A	Zambia B BF	
China A B BF C O	Denmark C	Chile B C	Tanzania B BF	
Japan A	Germany C	Haiti A	Republic of South Africa B C BF	
Nepal C	Norway C	Panama A	Mozambique C	
Pakistan B C	Hungary C	Bahamas A	Morocco C	
Bangladesh C	Finland C	Puerto Rico A		
Philippines A BF O	France C	Brazil A C		
Vietnam A C	Belgium C	Venezuela A		
Hong Kong Special	Poland B C	Peru A C		
Administrative Region B BF	Portugal B C			
Macau Special	Romania C			
Administrative Region B C				
Malaysia B BF C				