

DISPLAY ON TV


Displays icons and date/time on a TV screen.

| Setting | Details |
|---------|---|
| OFF | Does not display icons and date/time on TV. |
| ON | Displays icons and date/time on TV. |


Displaying the Item

Memo :

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

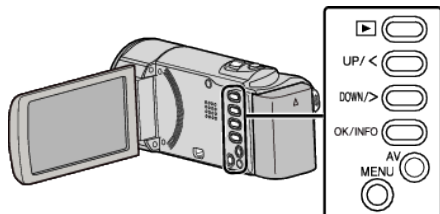

1 Press MENU.

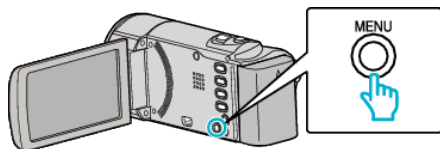

2 Select "CONNECTION SETTINGS" and press OK.



3 Select "DISPLAY ON TV" and press OK.

