 


Scene Selection

 
Common scenes that are often encountered can be recorded with the most suitable settings.

Memo : _____

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

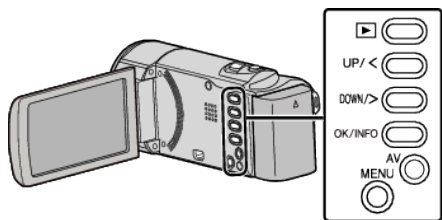


1 Press MENU.

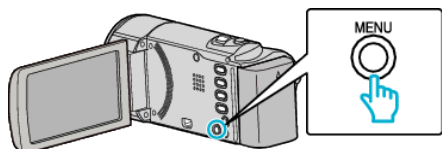


2 Select "MANUAL SETTING" and press OK.



 3 Select "SCENE SELECT" and press OK.

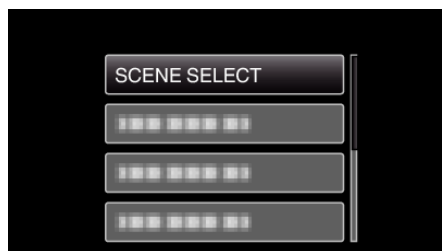

4 Select the scene and press OK.

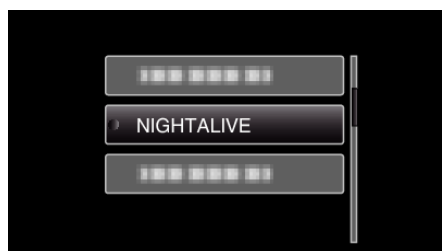 

- After setting, press OK.

*The image is only an impression.

Setting	Effect
<p> NIGHTLIVE</p>	<p>Increases gain and brightens the scene automatically using a slow shutter when the surrounding is dark. To prevent camera shake, use a tripod.</p> <p>OFF ON </p>
<p> SPOTLIGHT</p>	<p>Prevents the human subject from appearing too bright under light.</p> <p>OFF ON </p>