

## Types of Usable SD Card

The following SD cards can be used on this unit.

Operations are confirmed on the SD cards from the following manufacturers.

- Panasonic
- TOSHIBA
- SanDisk

## SDHC Card



- Use a Class 4 or higher compatible SDHC card (4 GB to 32 GB) for video recording.
- You can also use a Class 10 compliant SDHC/SDXC card.

## SDXC Card



- Use a Class 4 or higher compatible SDXC card (Max. 64 GB).

### Memo :

- Using SD cards (including SDHC/SDXC cards) other than those specified above may result in recording failure or data loss.
- Class 4 and Class 6 are guaranteed to have a minimum transfer rate of 4 MB/s and 6 MB/s respectively during reading or writing of data.
- To protect the data, do not touch the terminals of the SD card.

## When your computer cannot recognize the SDXC card

Confirm and update the OS of your computer.

<b>Windows XP / Windows XP SP1</b>	Necessary to update to SP2 or higher.
<b>Windows XP SP2 / Windows XP SP3</b>	Necessary to download the update software. (KB955704) <a href="http://www.microsoft.com/downloads/details.aspx?FamilyID=1cbe3906-ddd1-4ca2-b727-c2dff5e30f61&amp;displaylang=en">http://www.microsoft.com/downloads/details.aspx?FamilyID=1cbe3906-ddd1-4ca2-b727-c2dff5e30f61&amp;displaylang=en</a>
<b>Windows Vista</b>	Necessary to update to SP1 or higher.
<b>Mac OS</b>	Not compatible.