


## Playing Back Videos


You can select and play back the recorded videos from an index screen (thumbnail display).




- 1 Select the playback mode.

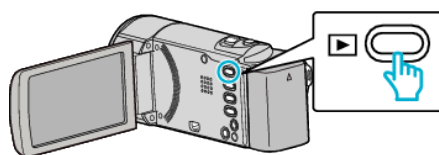

- Press  again to return to the recording mode.

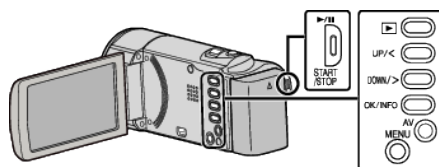
- 2 Select the desired video and press OK or .





- Press the  button to stop (pause) playback.
- To return to the index screen, slide along the  (zoom) lever while playback is paused.
- To move to the next page on the index screen, slide along the  (zoom) lever.

### Operation Buttons/Lever for Video Playback

#### During Index Screen Display

Operation Button/Lever	Description
UP/< DOWN/>	Select/move cursor
OK/INFO 	Play back video
Zoom T/W	Move to the next or previous page

#### During Video Playback

Operation Button/Lever	During Video Playback	During Video Pause
	Pause	Playback
Zoom 	-	Stop (returns to thumbnail display)
Zoom T / Vol.+	Increases volume level	-
Zoom W / Vol.-	Decreases volume level	-
UP/<*	Reverse search	Frame-by-frame playback in reverse direction
DOWN/>*	Forward search	Frame-by-frame playback in forward direction

\*Press and hold to start slow playback.

 
#### Caution :

- Make a backup of important recorded data.  
It is recommended to copy your important recorded data to a DVD or other recording media for storage.  
JVC will not be responsible for any lost data.

## Playback

---

### Adjusting the Volume of Videos



### Checking the Recording Date and Other Information

You can display the recording date and duration of the selected file.

- 1 Pause playback.
- 2 Press OK/INFO.

