 


 
## Reducing Camera Shake

When the image stabilizer is set, camera shake during recording can be effectively reduced.

 
- 1 Open the LCD monitor and select the video mode.

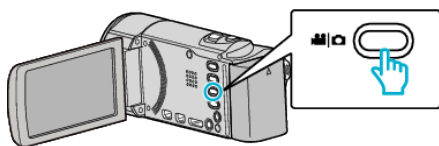

- 2 Tap "MENU".

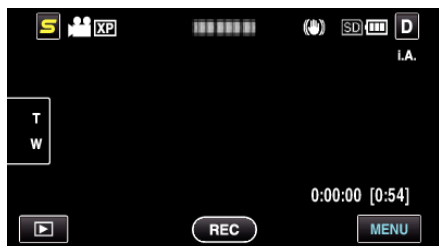

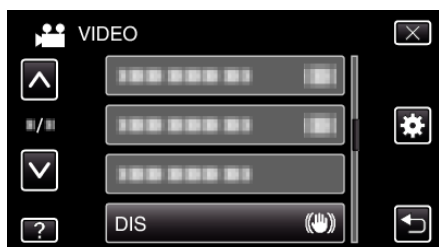


- 3 Tap "DIS" (image stabilizer).



- Tap  $\wedge$  or  $\vee$  to move upward or downward for more selection.
- Tap  $\times$  to exit the menu.
- Tap  $\leftarrow$  to return to the previous screen.

- 4 Tap the desired setting.



Display	Setting
 OFF	Deactivates image stabilizer.
 ON	Reduces camera shake under normal shooting conditions.
 ON (AIS)	Reduces camera shake more effectively when shooting bright scenes on the wide angle end. Only on the wide angle end (approx. 5x).

### Memo :

- It is recommended to set the image stabilizer to "OFF" when shooting a subject of little movement with the unit on a tripod.
- Complete stabilization may not be possible if camera shake is excessive.
- This setting is effective for video recording only.