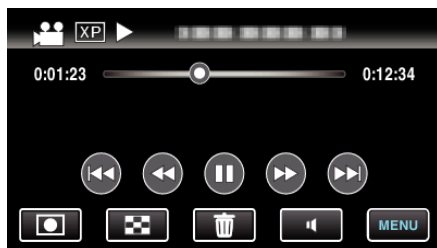

Deleting the Currently Displayed File

Deletes the currently displayed file.

Caution :

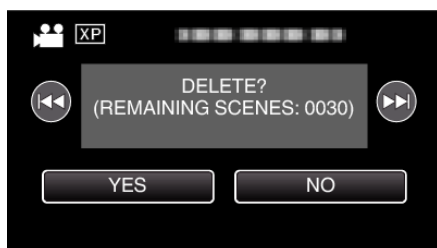
- Deleted files cannot be restored.
-



1 Tap .



- While the video mode is shown in the image, the same operations apply for the still image mode.

2 Tap "YES".



- Tap  /  to select the previous or next file.
- When no file remains, the screen returns to the index screen.

Memo :

- Files that are protected cannot be deleted.
Release protection before deleting the file.
-