Recording cannot be performed.

Check the ₩/□ button. Set to the recording mode by tapping the ● button.