



Manual Recording

You can adjust settings, such as brightness, by using the manual mode. Manual recording can be set for both video and still image modes.


- 1 Open the lens cover.

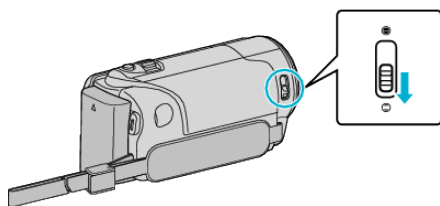

- 2 Open the LCD monitor.

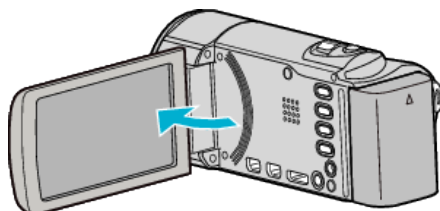


- 3 Open the LCD monitor and select the video or still image mode.

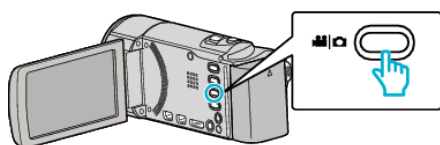


- The video or still image mode icon appears.

- 4 Select the Manual recording mode.

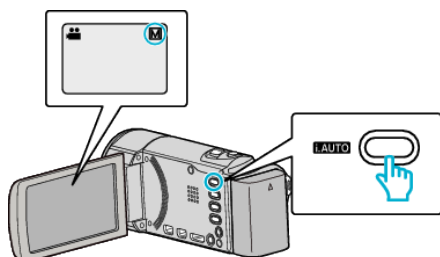

- If the mode is Intelligent Auto, press the i.AUTO button to switch. The mode changes between Intelligent Auto and Manual with every press.

- 5 Start recording.

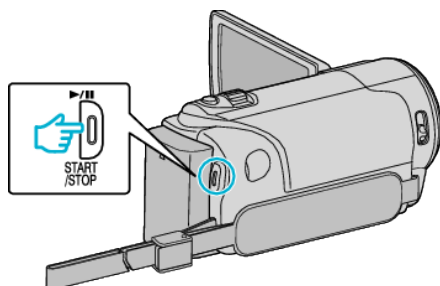

- Press again to stop.

Memo : _____

- The manual settings are displayed only in the manual mode.

Manual Recording Menu

The following items can be set.

Name	Description
SCENE SELECT	<ul style="list-style-type: none"> • Recordings that suit the shooting conditions can be performed easily.
FOCUS	<ul style="list-style-type: none"> • Use manual focus if the subject is not focused automatically.
BRIGHTNESS ADJUST	<ul style="list-style-type: none"> • Overall brightness on the screen can be adjusted. • Use this when recording in a dark or bright location.
WB WHITE BALANCE	<ul style="list-style-type: none"> • Overall color on the screen can be adjusted. • Use this when the color on the screen appears differently from the actual color.
BACKLIGHT COMP.	<ul style="list-style-type: none"> • Corrects the image when the subject appears dark due to backlight. • Use this when shooting against the light.
TELE MACRO	<ul style="list-style-type: none"> • Use this to take close-up (macro) shots of the subject.