 


Setting the USER Button

By assigning one of manual adjustment functions that you frequently use to the USER button, you can access the function quickly.

 
Assigning a Function to the USER Button

- 1 Select video or still image mode.

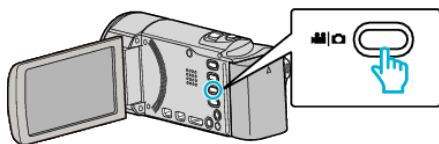

- The video or still image mode icon appears.

- 2 Tap "MENU".

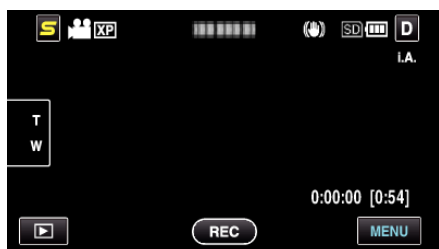


- 3 Tap "USER BUTTON SETTING".



- Tap \wedge or \vee to move upward or downward for more selection.
- Tap \times to exit the menu.
- Tap \curvearrowright to return to the previous screen.

 - 4 Select the desired function.

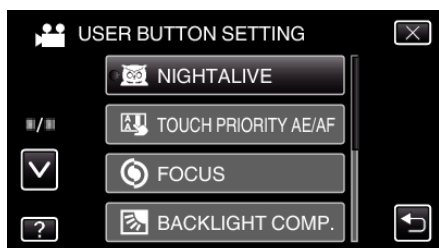

You can select one of the following functions.

- NIGHTLIVE
- TOUCH PRIORITY AE/AF
- FOCUS
- BACKLIGHT COMP.
- WHITE BALANCE
- DIS (video mode)
- SELF-TIMER (still image mode)

(TOUCH PRIORITY AE/AF, WHITE BALANCE)

- 1) Press the USER button.
- 2) Tap the desired function to set.

Memo : _____

- The USER button is invalid when the menu is displayed.

Making Adjustments with the USER Button

Operate as follows.

■ In the case of functions that are turned on or off (NIGHTLIVE, BACKLIGHT COMP., DIS, SELF-TIMER)

Press the USER button to turn on or off the function.

■ In the case of FOCUS

Press the USER button to switch FOCUS between automatic and manual. To adjust focus manually, refer to "Adjusting Focus Manually" (p. 0).

■ In the case of functions that have settings to be selected