



Main Menu for Still Image Recording

You can adjust various settings, such as brightness and white balance, to suit the subject or purpose. You can also change settings such as picture quality and gain.

- 1 Select still image mode.

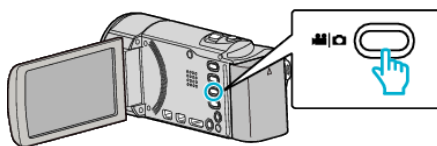


- 2 Tap  to select the recording mode.



- The mode changes between recording and playback with every tap.

- 3 Tap "MENU".

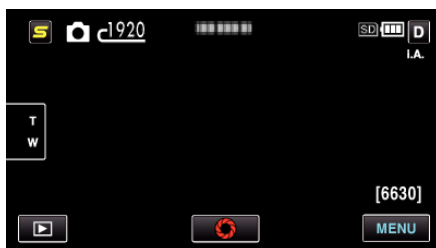

Setting	Details
SCENE SELECT	Settings to suit the shooting condition can be selected. *Displayed only in the manual recording mode.
FOCUS	Focus can be adjusted manually. *Displayed only in the manual recording mode.
BRIGHTNESS ADJUST	Adjusts the overall brightness of the screen. *Displayed only in the manual recording mode.
WHITE BALANCE	Adjusts the color according to the light source. *Displayed only in the manual recording mode.
BACKLIGHT COMP.	Corrects the image when the subject appears dark due to backlight. *Displayed only in the manual recording mode.
TELE MACRO	Enables close-up shots when using the telephoto (T) end of the zoom. *Displayed only in the manual recording mode.
TOUCH PRIORITY AE/AF	Automatically adjusts focus and brightness based on the subjects' faces or selected area.
LIGHT	Turns on/off the light.
SELF-TIMER	Use this when taking a group photo.
GAIN UP	Makes the subject appear bright automatically when recording in dark places.
AUTO REC	Enables the unit to record still images automatically by sensing the changes in brightness within the red frame displayed on the LCD monitor.
SHUTTER MODE	Continuous shooting settings can be adjusted.
SMILE SHOT	Automatically captures a still image upon detection of a smile.
SMILE%/NAME DISPLAY	Sets the items to display when faces are detected.
FACE REGISTRATION	Registers the faces of people who are often shot with this unit.
IMAGE SIZE	Sets the image size (number of pixels) for still images.

Menu Settings

USER BUTTON SETTING	Assigns a frequently used function to the USER button.
---------------------	--