
 
Connecting via the Component Connector

You can connect this unit to the component connector of a TV to play back videos in analog high-definition quality.

- Refer also to the instruction manual of the TV in use.
- Connect to a TV.

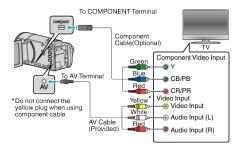

- \bullet Turn off the camcorder by pressing the $\ensuremath{\mbox{0}}$ button for about 2 seconds.
- 2 Connect the AC adapter to this unit.



3 Press the external input button on the TV to switch to the input from this unit via the connected connector.



4 Play back a file.



Memo:-

- Even if "DISPLAY ON TV" in the common menu is set to "ON" during video playback, buttons (icons) and date/time will not be displayed on the connected TV. In addition, buttons (icons) and date/time displayed on the LCD monitor of this unit will not disappear even after 3 seconds.
- When playing back in HD quality, set "COMPONENT OUTPUT" in the common menu to "1080i".
- The video is output in standard quality if the setting remains at "480i".
- For questions about the TV or method of connection, contact your TV's manufacturer.