

VIDEO QUALITY

Sets the video quality.


Setting	Details
UXP	Enables recording in the best picture quality. <ul style="list-style-type: none"> Applies to Blu-ray discs only. Videos taken in high-definition quality cannot be saved to DVDs.
XP	Enables recording in high picture quality.
SP	Enables recording in standard quality.
EP	Enables long recordings.
SSW	Enables recording in standard definition (16:9).
SEW	Enables recording in standard definition (16:9) with a lower bit rate than "SSW".


Memo :

- Set to "UXP" or "XP" mode when recording fast-moving scenes or scenes with extreme changes of brightness to avoid noise.
- Use an external Blu-ray drive to save videos recorded in "UXP" mode.
- You can change to the desired "VIDEO QUALITY" by tapping on it from the remaining recording time display.
- "SSW" and "SEW" are not available when "FACE SUB-WINDOW", "LIGHT", or "x.v.Color" are set.

Displaying the Item

1 Select video mode.

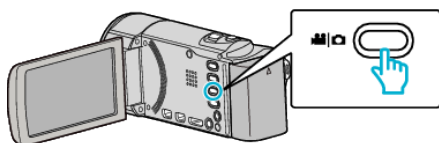


2 Tap  to select the recording mode.



- The mode changes between recording and playback with every tap.

3 Tap "MENU".

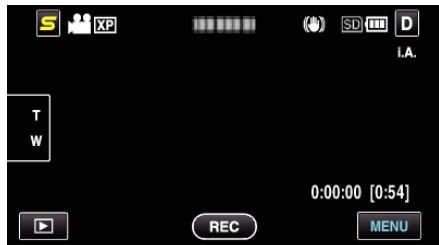

4 Tap "VIDEO QUALITY".

