

## Optional Accessories

You can record for a longer time by using the optional battery pack.

Product Name	Description
Battery Pack <ul style="list-style-type: none"> <li>• BN-VG114E/BN-VG114AC</li> <li>• BN-VG121E/BN-VG121AC</li> <li>• BN-VG138E</li> </ul>	<ul style="list-style-type: none"> <li>• Provides a longer recording time. It can also be used as a spare battery pack.</li> </ul>
Battery Charger <ul style="list-style-type: none"> <li>• AA-VG1</li> </ul>	<ul style="list-style-type: none"> <li>• Enables the battery pack to be charged without using this unit.</li> </ul>
Component Cable <ul style="list-style-type: none"> <li>• QAM1266-001</li> </ul>	<ul style="list-style-type: none"> <li>• For viewing in high picture quality.</li> <li>• Consult your nearest JVC service center.</li> </ul>
HDMI Cable <ul style="list-style-type: none"> <li>• VX-HD310ES</li> <li>• VX-HD315ES</li> <li>• VX-HD320</li> <li>• VX-HD330</li> </ul>	<ul style="list-style-type: none"> <li>• For viewing in high picture quality.</li> <li>• Transmits video, audio, and control signals between devices.</li> </ul>

### Memo :

- For more information, refer to the catalog.
- BN-VG114E/BN-VG114AC is the same battery pack that comes with this unit.

### Approximate Recording Time (Using Battery)

Battery Pack	Actual Recording Time		Continuous Recording Time	
	GZ-HM445/ GZ-HM448	GZ-HM650/ GZ-HM670	GZ-HM445/ GZ-HM448	GZ-HM650/ GZ-HM670
<b>BN-VG114E/BN-VG114AC (Supplied)</b>	1 h (1 h 5 m)	1 h (1 h 5 m)	1 h 50 m (2 h)	1 h 50 m (1 h 55 m)
<b>BN-VG121E/BN-VG121AC</b>	1 h 35 m (1 h 40 m)	1 h 30 m (1 h 35 m)	2 h 50 m (3 h 5 m)	2 h 45 m (2 h 55 m)
<b>BN-VG138E</b>	2 h 50 m (3 h)	2 h 40 m (2 h 55 m)	5 h 5 m (5 h 30 m)	4 h 55 m (5 h 20 m)

- The above are values when "LIGHT" is set to "OFF" and "MONITOR BRIGHTNESS" is set to "4" (brighter).  
( ): Values when "LIGHT" is set to "OFF" and "MONITOR BRIGHTNESS" is set to "3" (standard)
- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly.  
(It is recommended to prepare battery packs ready for three times the expected recording time.)
- When the battery life is reached, the recording time becomes shorter even if the battery pack is fully charged.  
(Replace the battery pack with a new one.)