 



## Playing Back Still Images

You can select and play back the recorded still images from an index screen (thumbnail display).

- 1 Select still image mode.

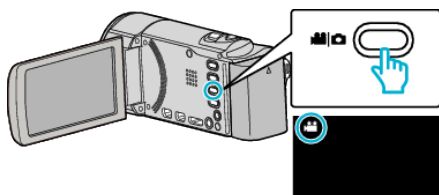

 - 2 Tap to select the playback mode.

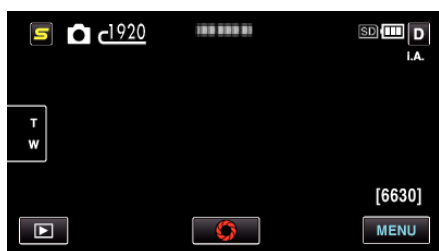


- 3 Tap on the file to start playback.



- Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together. Only the first recorded file is shown and the group is displayed with a green frame.
- Tap to select the media for playback.
- Tap to return to the index screen.
- Tap to return to the recording mode.

### Operation Buttons for Still Image Playback
 
#### During Index Screen Display

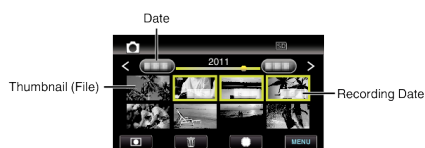


- Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together. Only the first recorded file is shown and the group is displayed with a green frame.

Display	Description
<b>Date</b>	Moves to the previous/next date
<	Displays the previous index screen (thumbnail display)
>	Displays the next index screen (thumbnail display)
<b>Thumbnail (File)</b>	Tap on thumbnail - Starts playback Flick to right - Scrolls to the right to show the previous index screen (thumbnail display) Flick to left - Scrolls to the left to show the next index screen (thumbnail display)
<b>Recording Mode</b>	Switches to recording mode

	Switches between the index screen of the built-in memory and SD card
	Displays the index screen (thumbnail display) to perform deletion
<b>MENU</b>	Displays the menu screen
<b>Recording Date</b>	Recording date (only displayed on the first file of each date)

#### During Still Image Playback

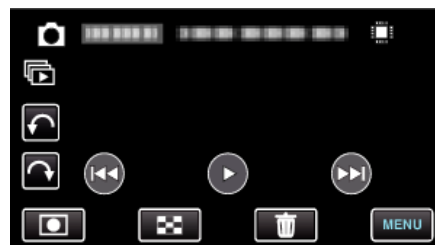 

Display	Description
	Returns to the previous still image
	Starts/pauses slideshow
	Reverse playback during slideshow
	Normal playback during slideshow
	Advances to the next still image
<b>Recording Mode</b>	Switches to recording mode
	Returns to index screen
	Deletes the currently selected file
<b>MENU</b>	Displays the menu screen
	Rotates to the left (rotates by -90° with each tap)
	Rotates to the right (rotates by 90° with each tap)
	Continuous playback of still images captured by continuous shooting

#### Memo :

- Tap or drag on the operation area of the touch screen.
- Operations buttons on the touch screen disappear if the unit is not operated for about 3 seconds. Tap on the screen to display the operation buttons again.
- You can rotate a still image 90° to the right or left during playback. Rotation applies to the on-screen display only.
- You can search for a specific file by the recording date. This is useful when searching from a large number of files.

#### Caution :

- This unit is a microcomputer-controlled device. Electrostatic discharge, external noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such a case, turn off the power, then remove the AC adapter and battery pack. This unit will be reset.