Preparing an External Blu-ray Drive

Memo:

When connecting to the external Blu-ray drive, use a USB cable with Mini-A (Male) – B (Male) connectors.


The USB cable provided with this unit cannot be used.

• I-O DATA: USB-MAB/100 Mini-A (Male) - B (Male)

To use the USB cable provided with the external Blu-ray drive, purchase the USB extension cable.

Mini-A (Male) – A (Female)
(Part number: QAM0852-001)

- 1 Connect the USB cable and the AC adapter.
 - Turn off the camcorder by pressing the **b** button for about 2 seconds.

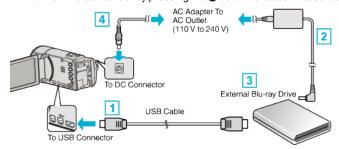

- 1 Connect the USB cable of the external Blu-ray drive to this unit.
- 2 Connect the AC adapter of the external Blu-ray drive.
- 3 Turn on the external Blu-ray drive.
- 4 Connect the AC adapter to this unit.
 - This unit powers on automatically when the AC adapter is connected.
 - This unit turns on and the "BACK-UP" menu appears.
 - While the USB cable is connected, the "BACK-UP" menu is displayed.
 - Refer also to the instruction manual of the external Blu-ray drive.

2 Insert a new disc.

 Press the power button on the external Blu-ray drive to turn on the power.



- 1 Press the eject button to open the disc tray.
- Pull out the tray completely and load a new disc properly.
- 3 Push the disc tray in until it clicks into place.

Caution:

Be sure to turn off the power when connecting the devices.
Otherwise, electric shocks or malfunctions may occur.