

## DATE DISPLAY STYLE

Sets the order of year, month, day and the time display format (24H/12H).

 
1 Tap "MENU".




2 Tap .




3 Tap "DATE DISPLAY STYLE".

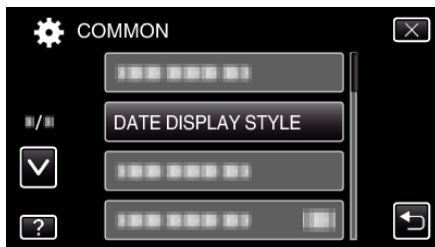

 4 Tap to set the style of date and time display.

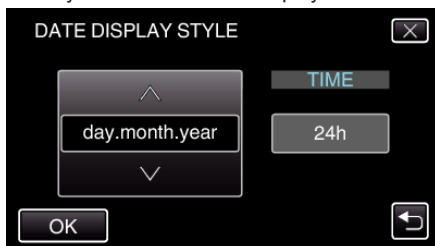

 - For date display, set to any format from "month.day.year", "year.month.day", and "day.month.year".
- For time display, set to any format from "12h" and "24h".
- Tap the operation buttons  $\wedge$  or  $\vee$  to move the cursor.
- After setting, tap "OK".

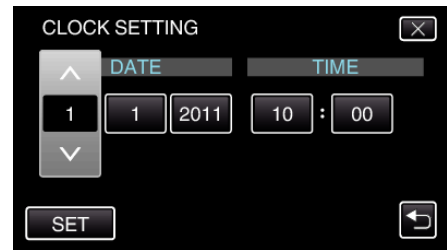

- The order of "Year, Month, Day, Time" changes according to the date display style.

## Clock Set Style

The clock set style of this unit varies with the models.

