 



Manual Recording

You can adjust settings, such as brightness, by using the manual mode. Manual recording can be set for both video and still image modes.


1 Open the lens cover.

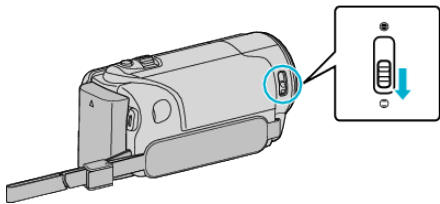

 2 Open the LCD monitor.

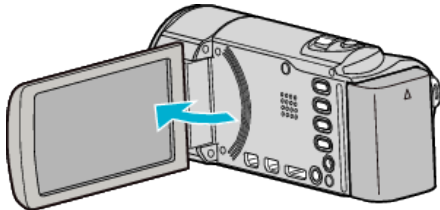


 3 Open the LCD monitor and select the video or still image mode.

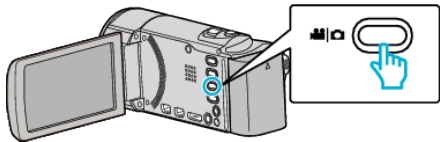


- The video or still image mode icon appears.

 4 Select the Manual recording mode.

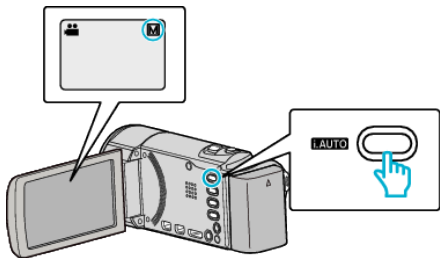

- If the mode is Intelligent Auto, press the i.AUTO button to switch. The mode changes between Intelligent Auto and Manual with every press.

 5 Start recording.

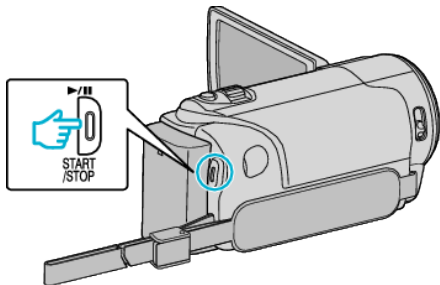

- Press again to stop.

Memo : _____
• The manual settings are displayed only in the manual mode.

Manual Recording Menu

The following items can be set.

Name	Description
SCENE SELECT	Recordings that suit the shooting conditions can be performed easily.
FOCUS	Use manual focus if the subject is not focused automatically.
BRIGHTNESS ADJUST	- Overall brightness on the screen can be adjusted. - Use this when recording in a dark or bright location.
WB WHITE BALANCE	- Overall color on the screen can be adjusted. - Use this when the color on the screen appears differently from the actual color.
BACKLIGHT COMP.	- Corrects the image when the subject appears dark due to backlight. - Use this when shooting against the light.
TELE MACRO	Use this to take close-up (macro) shots of the subject.