



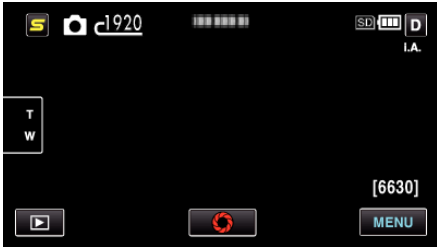
Main Menu for Still Image Playback

You can delete or look for specific still images.

1 Select still image mode.

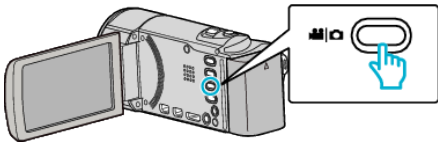

2 Tap  to select the playback mode.



- The mode changes between recording and playback with every tap.

3 Tap "MENU".



Setting	Details
SEARCH DATE	You can search and play videos or still images according to recording dates.
SLIDE SHOW EFFECTS	Sets the transition effects in slideshow playback.
PROTECT/CANCEL	Protects files from being deleted accidentally.
COPY	Copies files to another media.
MOVE	Moves files to another media.