


SLIDE SHOW EFFECTS

Sets the transition effects in slideshow playback.


Setting	Details
SLIDE	Switches the screen by sliding in from right to left.
BLINDS	Switches the screen by dividing into vertical strips.
CHECKERBOARD	Switches the screen by changing through a checkered pattern.
RANDOM	Switches the screen with a random effect from "SLIDE", "BLINDS", and "CHECKERBOARD".

Displaying the Item

- 1 Select still image mode.

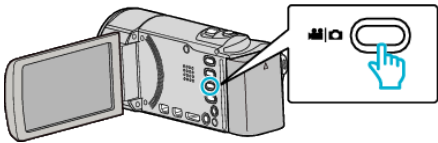

- 2 Tap to select the playback mode.

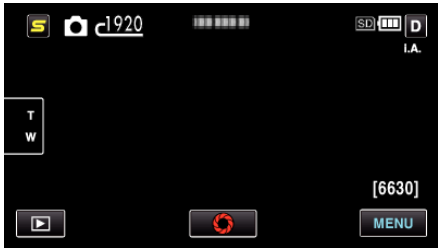

- The mode changes between recording and playback with every tap.

- 3 Tap "MENU".



- 4 Tap "SLIDE SHOW EFFECTS".

