



ERASE ALL DATA (GZ-HM650/GZ-HM670)

Execute this process when disposing of this unit or passing it to another person.

- 1 Tap "MENU".

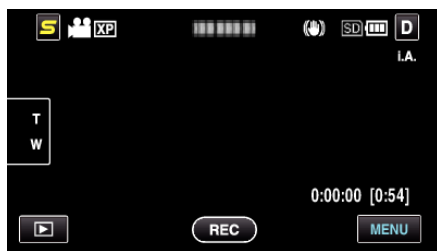

- 2 Tap "⚙️".

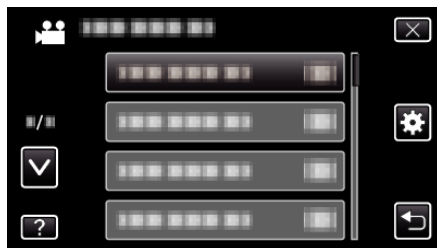

- 3 Tap "ERASE ALL DATA".



- 4 Tap "YES".



- After deleting is complete, tap "OK".

Caution :

- Connect the AC adapter when erasing all data on the built-in memory. Erasing cannot be performed if the AC adapter is not connected.

Memo :

- Repeat the process to make data restoration even more difficult.