



### Copying Selected Files

Select and copy the desired videos or still images individually.

1 Select video or still image mode.

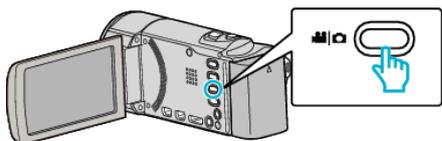

2 Tap "SELECT AND CREATE" (video) or "SELECT AND SAVE" (still image).

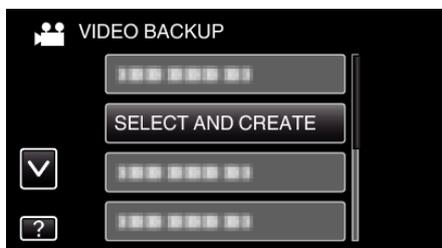

3 Tap on the media to copy.



(GZ-HM650/GZ-HM670)




(GZ-HM445/GZ-HM448)

4 Tap "SELECT FROM SCENES" (video) or "SELECT FROM IMAGES" (still image).




- While the video mode is shown in the image, the same operations apply for the still image mode.

5 Tap on the videos or still images to copy.

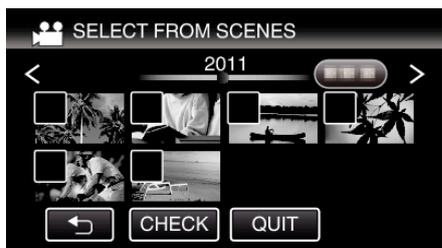

- A check mark appears on the selected file. To remove the check mark, tap on the file again.
- Tap "CHECK" to check the file.

6 After selecting all the files, tap "SAVE".

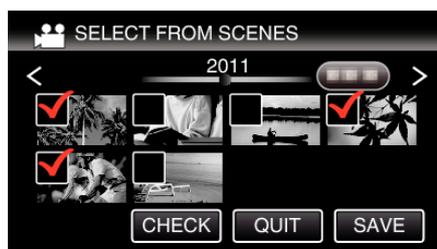

7 Tap "EXECUTE".



- The number of discs required to copy the files is displayed. Prepare the discs accordingly.

8 Tap "YES" or "NO". (👤 mode only)




- When "YES" is selected, videos with similar recording dates are displayed in groups.
- When "NO" is selected, videos are displayed according to recording dates.

9 Tap "EXECUTE".



- When "INSERT NEXT DISC" appears, change the disc.

10 After copying, tap "OK".

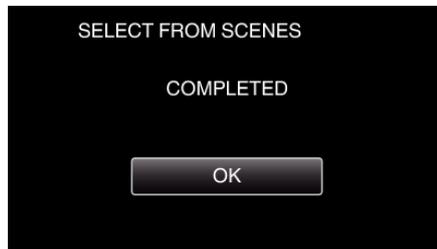

11 Press and hold the button for 2 seconds or more to turn off this unit and disconnect the USB cable.

**Caution :**

- Do not turn off the power or remove the USB cable until copying is complete.
- Files that are not on the index screen during playback cannot be copied.

**Memo :**

## Copying

---

- To check the created disc, refer to ““Playing Back with an External Blu-ray Drive” (p. 0 )”.
-